



AUTOMATIC AIR CHUCK

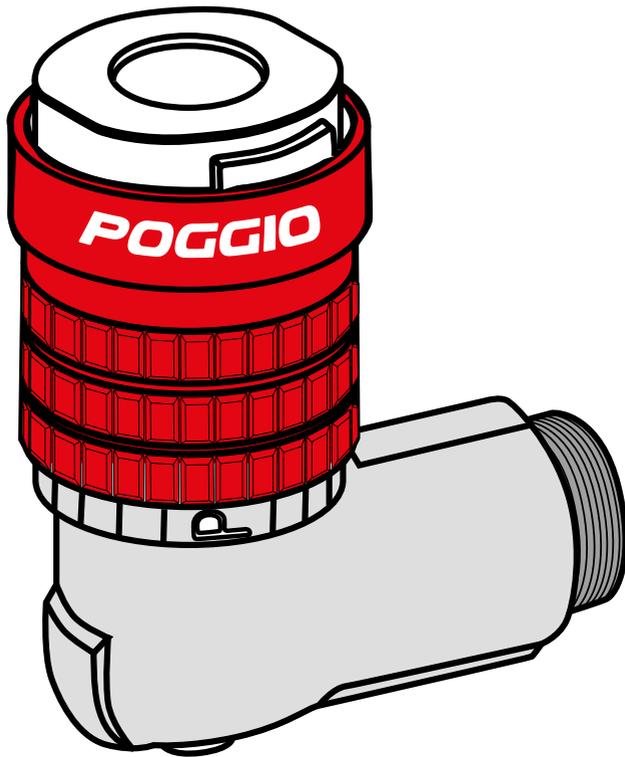

DESCRIPTION

The automatic connector (ref. PI-0009), supplied with the R180, is a connector which allows the compressor to be easily connected to a PRESTA type valve (with or without an extension) or SCHRADER.

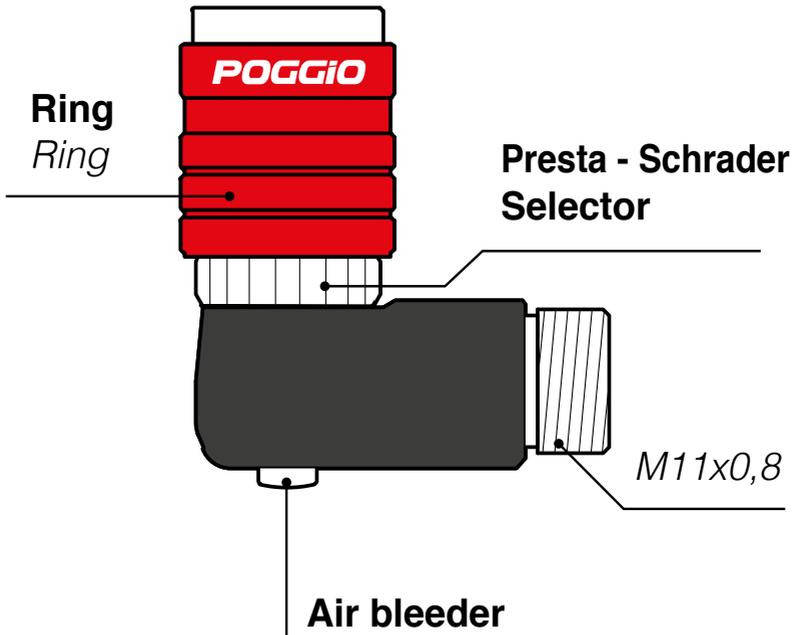


For more efficiency, we recommend that you place the valve towards the bottom of the wheel.


IMPORTANT: this tip is a new process. Tests should be done to make sure it is suitable for the type of valve you are going to use

1. SETTING FOR PRESTA or SCHRADER VALVE


① Take out the ring

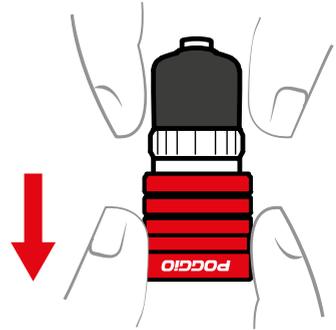

② Turn the selector on Presta (P) or Schrader (S).

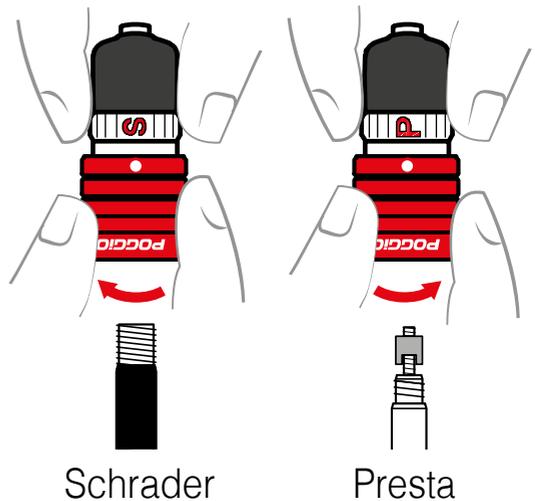


③ Push back the ring before use.

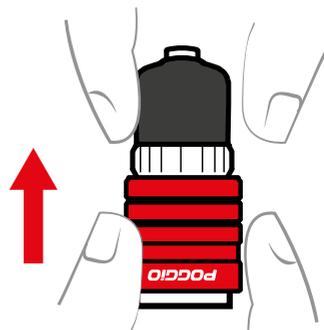


2. INFLATION


- ① Place place firmly the connector on the valve

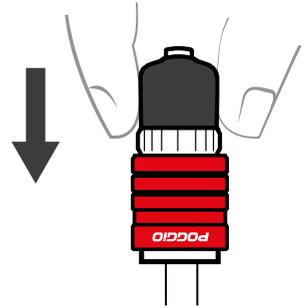


- ② Then slide the ring.

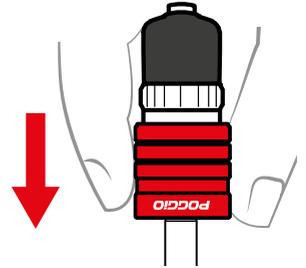

- ③ Screw the ring, without forcing, to lock.

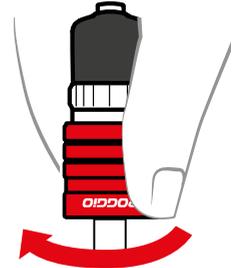


- ④ Once inflation is complete, remove the connector by holding it by the ring without unscrewing it.

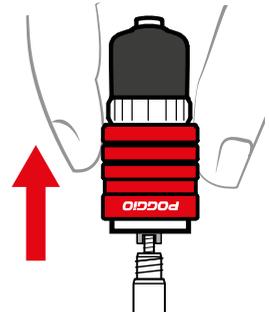

3. ADJUST PRESSURE

Adjust the pressure by pressing the air bleeder button.

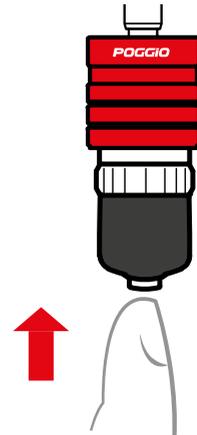

**Find all this information in video
on www.poggio-solutions.com
in the section "how to use the R180"**

